

FAST BOX™ MODEL 20

Fast Access Hidden Gun Storage

Secures multiple hand guns horizontally or vertically.

Operation Instructions

1. Open Safe with Key

- Insert the key into the lock and turn counterclockwise.
- Turn black knob clockwise to open safe.

NOTE #1: Store key in a secure place – NOT inside the safe.

2. Install Battery

- Using a Philips head screwdriver, remove the battery cover on the inside of the door. Insert a brand new Energizer 9V Alkaline battery (not included).

NOTE #2: DO NOT use Lithium or rechargeable batteries.

- Reinstall the battery cover.

3. Open Safe with Keypad

- Enter the default code "1-2-3-4-1".
- The LED light will illuminate green and the safe can be opened.

4. Set Personal Code

- Press and release the reset button, the LED light will stay green during the next step.

NOTE #3: The green light will stay on for 10 seconds.

- Enter a new code, 1 to 8 numbers in any sequence.
- Press and release the reset button, the LED light will flash green once.

Tools Needed

- Energizer 9V Alkaline battery
- Philips head screwdriver

5. Practice Unlocking Your Safe

- Keep the door open.
- Enter your new personal code and turn knob to confirm the code works correctly.
- If the wrong code is entered, the LED light will turn red after 8 digits.
- The locking system will go into sleep mode for 10 seconds after last entry.

6. Low Battery Indicator

- Light will turn red if battery power gets low.
- The key override will open safe if the battery loses power.

Detail of push buttons and lock on door.

