

1. Open the Safe With the Key

- Insert the key into the lock and turn counter-clockwise.

NOTE: Store key in a secure place—NOT inside the safe.

2. Install Batteries

- Remove the battery compartment cover, and insert 4 new AA batteries (not included).
- Reinstall the battery compartment cover.

3. USB-C Port

- There is an integrated USB-C port on the right side of the touchscreen that can be used to power the unit (USB-C cable not included).

3. Open the Safe With Touchscreen

- Wake up the touchscreen either by waving your hand over it or touching a button.
- Enter the default code "1-2-3-4".
- The green light will illuminate, there will be 2 audible beeps and the safe will open.
- The touchscreen will lock after 10 seconds if a partial code is entered, the red light will illuminate and there will be 3 audible beeps.

4. Set Personal Code

- Press and hold the reset button, located inside the safe, for approximately 3 seconds.
- There will be 2 audible beeps and the touchscreen will flash.
- Enter a new code, 3 to 8 numbers in any sequence.
- Press the reset button, there will be 2 audible beeps and the green light will flash once.

5. Turning the Sound Off

- Press and hold the "1" button for approximately 3 seconds.
- The touchscreen will turn off indicating it was successful and the sound is now off.

6. Turning the Sound On

- Press and hold the "1" button for approximately 3 seconds.
- The touchscreen will turn off and there will be an audible beep indicating it was successful and the sound is now on.

7. Alarm

- If the wrong code is entered 5 times in a row, an alarm will sound for 1 minute.
- After the alarm stops, the safe will be locked down for an additional minute.
- The safe can be opened by the key during those 2 minutes.

8. Interior Light

- When the correct code is entered and the safe opens, the light inside will illuminate for 30 seconds and then turn off automatically.
- The light will not illuminate when unlocked with the key.

9. Mounting the Safe

- It is recommended to mount the safe to a solid surface.
- Lift the foam to access the 2 mounting holes located on the bottom of the safe.
- Use the supplied hardware, as needed. You may need to purchase additional hardware for your specific installation needs.

10. Low Battery Indicator

- When sound is on: Enter the correct code, the safe will open followed by 5 beeps.
- When sound is off: Enter the correct code, the safe will open and the green light will quickly flash one time.

