

Fast Box™



SECUREIT

Product Name: Fast Box Model 36

Part Number: FB-36-01

What's Included:

Fast Box™ Model 36 Gun Safe

Override Keys (2)

Foam Pad

Mobile Straps (2)

The Fast Box™ door arrives locked, with the override keys banded to the knob.

Do not throw away the packaging until you've located the override keys.

Opening the Fast Box™:

- 1) Insert the key into the lock, then turn clockwise
- 2) Turn the knob clockwise to open the door
- 3) To lock the door, turn the handle counter-clockwise, turn the key counter-clockwise, and remove the key

Installing the battery:

- 1) The battery compartment is located on the inner door. Push down the compartment's release tab to open the compartment.
- 2) Properly orient the + and - terminals, insert the 9 volt battery into the compartment, and close the compartment

Lock Instructions:

Factory default access code: 1-2-3-4-1

Changing the access code:

- 1) Unscrew the metal cover from the red reset button, located on the inner door
- 2) Press and release the red reset button
- 3) The LED on the front of the door will turn green for 10 seconds indicating that the system is ready
- 4) While the green light is on, push the keypad buttons to enter a new access code between 1 and 8 digits
- 5) Press and release the red reset button to retain the code. The LED will blink green twice to confirm the code has been changed
- 6) Keep the door open and move the knob to the locked position. Enter the new code and then turn the handle to the unlocked position to confirm the code has been successfully changed
- 7) Reinstall the metal cover on the red reset button

Note: If you begin to enter the code incorrectly, wait at least 10 seconds before attempting to enter your code again.

Follow Us On:

Facebook - [Facebook.com/GunStorage](https://www.facebook.com/GunStorage)

Twitter - [@SecureItStorage](https://twitter.com/SecureItStorage)

Instagram - [@SecureIt](https://www.instagram.com/SecureIt)

YouTube - [YouTube.com/SecureItGunStorage](https://www.youtube.com/SecureItGunStorage)



The Fast Box™ drawer can be removed to allow the safe to be mounted inside a vehicle or onto another surface.

Drawer removal:

- 1) Unlock the safe and pull out the drawer to its furthest point
- 2) Locate the two rails on the bottom of the drawer, roughly 5" from each side
- 3) Push the black tabs on the middle of the rails to the right to release the drawer from the rails

Drawer re-installation:

- 1) Fully extend the sidling rails outwards
- 2) Line up the rails on the bottom of the drawer with the sliding rails
- 3) Hold the drawer level and push the drawer into the safe

Mobile Strap Installation:

- 1) Unlock the door, pull out the drawer, and remove the foam pad
- 2) Press the plastic tabs on the side release buckles to separate the male and female straps
- 3) With the female strap:
 - a) Move the tri-glide buckle 4" away from the female end of the side release buckle
 - b) With the female side release buckle facing towards you, feed the end of the strap from the back to the front through the metal tab in the back of the drawer
 - c) Feed the end of the strap through the bottom side of the tri-glide buckle and pull tight
- 4) With the male strap:
 - a) Hold the male side of the side release buckle facing away from you with the tri-glide buckle facing up.
 - b) Remove the bottom strap from the tri-glide buckle
 - c) Slide the tri-glide buckle 6" from the end of the top strap, then slide the male side release buckle 2" away from the tri-glide buckle
- 5) With the male side release buckle facing away from you, feed the end of the bottom strap from the back to the front through the metal tab in the front of the drawer
- 6) Feed the end of the strap through the bottom side of the tri-glide buckle and pull tight
- 7) Repeat steps 2 through 6 with the second set of straps on the other set of metal tabs
- 8) Install the foam pad on the bottom of the drawer and pull the male and female ends of the side release buckles through the cutouts on the foam pad

The length of the straps can be adjusted to accommodate different sized firearms by adjusting the tri-glide buckles.

Limited Lifetime Warranty

SecureIt Fast Box™ series gun cabinets shall be free from defects in material and workmanship for life. This warranty applies only to new products purchased from SecureIt or its authorized distributors and dealers. Electronics carry a two (2) year warranty from the date of purchase. Must provide proof of purchase to obtain service under this warranty. This warranty does not apply to damage or loss resulting from accident, misuse, improper installation, scratching of paint, normal wear and tear, or negligence. The responsibility of SecureIt under this warranty is limited to replacement or repairs of defective parts with all transportation charges paid by the original purchaser.

Side Release Buckle



Tri-glide Buckle (Top)



Tri-glide Buckle (Bottom)

