

Answer



Product Name: ANSWER 12
Model: ANS-59-12-BML
Description: Heavy-Duty Gun Safe, 12-Gun Storage

Product Specifications:

- W x D x H (External) 36" x 18" x 59"
- W x D x H (Internal) 35-7/8" x 14.5" x 58-3/4"
- Weight 390 lb.
- 12 Gauge Steel

Door Specifications:

- Four 1" diameter stationary bolts per hinge side on each door
- Twelve 1" diameter sliding bolts in total on both doors
 - Right door sliding bolts: two bolts on the top, two bolts on the bottom, and four bolts on the side
 - Left door sliding bolts: two bolts on the top and two bolts on the bottom
- Six heavy-duty hinges
- Left door handle located internally

Included Components:

- CradleGrid™ Technology
 - Cradles (12 ct.)
 - Stock Bases (6 ct.) (*Each Stock Base supports up to two long guns*)
- Override Keys (2 ct.)
- Electronic Lock with Biometric Keypad
- Black Powder Coated Finish
- Internal Power Hook-Up for Additional Accessories
- Internal Door Organizer

NOTE: MAKE SURE YOU STORE THIS DOCUMENT SOMEWHERE SECURE AND NOT INSIDE THE SAFE

About Your ANSWER 12, Heavy-Duty Gun Safe:

The Answer Model 12 is a heavy-duty gun safe system that provides storage for up to 12 rifles. Fully welded and weighing hundreds of pounds less than traditional gun vaults, allowing for flexible repositioning should you ever need to move it without compromising the security and safety you require to store your guns. Featuring CradleGrid™ Technology for organized and adaptable storage.

For More Information About SecureIt & Your Answer 12 Heavy-Duty Gun Safe

Visit Our Website: SecureItGunStorage.com

Follow Us On:

Facebook - Facebook.com/GunStorage

Twitter - [@SecureItStorage](https://twitter.com/SecureItStorage)

Instagram - [@SecureIt](https://www.instagram.com/SecureIt)

YouTube - YouTube.com/SecureItGunStorage



Lock Instructions

Your new Answer series gun cabinet includes a customizable, electronic biometric lock with a key override and a USB-C power port.

Factory (Default) Lock Settings:

Manager Code: 1-2-3-4-5-6

User One: 1-1-1-1

User Two: 2-2-2-2

Keypad Sound: On

Keypad Backlight: On

LED Lights:

Left LED: Red (Low Battery Warning Light)

Right LED: Yellow (Input Registered) / Green (Correct Code Received)

NOTE: Never store or place your override keys inside the cabinet. Always test new codes and fingerprints before closing or locking the door.

Opening the cabinet, for the first time:

The cabinet's door arrives locked. You can use one of the override keys to open the door, or you can power the keypad using a USB-C power cord and enter one of the default codes.

The battery compartment and reset button are located near the top of the inside door edge for the right door.

We only recommend installing brand new (directly from the store), brand name (Energizer or Duracell), alkaline batteries. Do not use lithium or rechargeable batteries.

The reset button is covered by a metal, threaded cover.

To reprogram the manager code:

1. Remove the metal cover on the red reset button.
2. Press and release the red reset button.
3. Enter a new manager code, between 3 and 12 digits long.
4. Press and release the red reset button to save the code.
5. Test the new code to confirm.

To reprogram the user codes:

1. Remove the metal cover on the red reset button.
2. Select the code you'd like to reprogram. Press 1 for code number one or 2 for code number two, then immediately press the red reset button.
3. Enter a new user code, between 3 and 12 digits long.
4. Press and release the red reset button to save the code.
5. Test the new code to confirm.
6. Follow steps 1-5 to reprogram the other user code.

To program fingerprints:

1. Remove the metal cover on the red reset button.
2. Press the number 3 keypad button, then immediately press and release the red reset button.
3. Press one fingerprint against the scanner until you hear a small beep.
4. Reposition your finger and repeat step 3, until you hear a long beep and the green LED flashes.

NOTE: If the yellow LED flashes three times, then the fingerprint was not saved and you'll need to repeat the process. You can register up to thirty fingerprints.

Turning the fingerprint scanner ON/OFF:

In the standby state, press the 6 button twice, then press and release the red reset button to disable or enable the fingerprint scanner.

Turning the Keypad Sound ON/OFF:

In the standby state, hold down the 4 button to enable or disable sound.

Turning the Keypad Backlight ON/OFF:

In the standby state, hold down the 6 button to enable or disable the keypad's backlight.

Factory reset:

To revert to the default settings, hold the red reset button for 5 seconds, until you hear a long beep.

Lock Out Mode:

If you enter incorrect codes or fingerprints five times in a row, then the keypad will go into lock out mode for 60 seconds. During lock out mode, the keypad will beep every second. You will need to wait until the keypad stops beeping before you can try again.

Power Port:

If the battery is dead or weak, then you can power the keypad with a USB-C power cord and the power port on the bottom, right side of the keypad.

Shipping Brackets

Answer cabinets arrive with shipping brackets bolted onto the bottom, so that the cabinet can be moved with a pallet jack during shipping.

The shipping brackets are meant to be removed after delivery. We provide bracket removal instructions in the Help/FAQ section of our website. If you need help finding the instructions or if you have questions regarding removal, then please contact our Tech Support team for assistance.

Cradle and Stock Base Installation

Cradles:

Step 1: Adjust the position of the Cradle to accommodate the length of your long gun.

Step 2: Place the back of the Cradle up against the back wall of the cabinet, so that the Cradle is lined up above two louvers vertically.

Step 3: Slide the Cradle directly downwards, so that the Cradle is firmly secured behind the two vertical louvers.

Stock Bases:

Step 1: Connect Stock Bases together by lining up the plastic tabs on the right side with the divots on the left side, then press together

Step 2: Place the Stock Bases on the floor of the safe 1" to 3" from the back wall, with the SecureIt logos facing the front

Step 3: Store your long guns inside the safe, with the stocks resting on the Stock Bases and the barrels resting in the Cradles

NOTES: When storing long guns with optics attached, we recommend placing the optics towards the back of the safe

Keep the door frame clear of obstructions, such as gear or Stock Bases. If the door is difficult to close or the handle turns hard, then please check the door frame for blockages.

Do you have questions or need help?

Email: Support@SecureItTactical.com

Phone: 1-800-651-8835

8:00 am - 4:30 pm Eastern, Monday – Friday

Limited Lifetime Warranty

SecureIt Answer series gun cabinets shall be free from defects in material and workmanship for life. This warranty applies only to new products purchased from SecureIt or its authorized distributors and dealers. Electronics carry a two (2) year warranty from the date of purchase. One must provide proof of purchase to obtain service under this warranty. This warranty does not apply to damage or loss resulting from accident, misuse, improper installation, scratching of paint, normal wear and tear, or negligence. The responsibility of SecureIt under this warranty is limited to replacement or repairs of defective parts with all transportation charges paid by the original purchaser.