

# Fast Box™



# SECUREIT

**Product Name: Fast Box™ Model 40 or 47**

**Product Numbers:**

FBX-40-02-BML or FBX-47-02-BML

## What's Included:

Fast Box™ Model 40 or 47 Gun Safe

Override Keys (2)

Cradles (2)

Stock Base

**Do not throw away the packaging until you've located the override keys and completed set-up.**

The Fast Box™ door arrives locked, with the override keys banded to the knob.

## Opening the Fast Box™:

1. Insert the key into the lock, then turn counter-clockwise 90 degrees.
2. Turn the knob clockwise 90 degrees to open the door.
3. To lock the door, turn the knob counter-clockwise, turn the key clockwise, and remove the key.

## Installing the battery:

1. The battery compartment is located on the inner door. Push down the compartment's release tab to open the compartment.
2. Properly orient the + and - terminals, insert the 9 volt battery into the compartment, and close the compartment.

**NOTE: We only recommend installing brand new (directly from the store), brand name (Energizer or Duracell), alkaline batteries. Do not use lithium or rechargeable batteries.**

## Fast Box™ and Wolf Badge Orientation:

The Fast Box™ Model 40 or Model 47 can be oriented vertically or horizontally, depending on your storage needs. The wolf badge on the front door can also be reoriented to match your safe's orientation. Simply remove the mounting screws with a #1 Philips-head screwdriver, rotate the badge 90 degrees, then reattach the badge to the door with the mounting screws.

## Mounting the Fast Box™:

The Fast Box™ has pre-drilled mounting holes to allow mounting to the floor, wall, or inside of a vehicle. We recommend using 1/4" diameter, material specific hardware for mounting.

## Cradle and Stock Base Installation:

Cradles and the Stock Base can be used with the Fast Box™ in the vertical position. Place a Cradle against the back wall over two vertical louvers, then push directly down to install. Cradles can be repositioned to match the length of your long gun. The Stock Base sits on the cabinet floor.



**Do you have questions or need help?**

**Email:** [Support@SecureItTactical.com](mailto:Support@SecureItTactical.com)

**Phone:** 1-800-651-8835

**Hours of Operation:** 8:00 AM - 4:30 PM Eastern,  
Monday through Friday



**Contact Us  
Here**

**See Our Warranty and  
Return Policies Here**

# Lock Programming Instructions REVA0924

## Factory (Default) Lock Settings:

**Manager Code:** 1-2-3-4

**User One:** 1-1-1-1

**User Two:** 2-2-2-2

**Keypad Sound:** On

**Keypad Backlight:** On

### LED Lights:

Left LED: Red (Low Battery Warning Light)

Right LED: Yellow (Input Registered) /

Green (Correct Code Received)

**NOTE:** Never store or place your override keys inside the cabinet. Always make programming changes with the door open, and test the new codes/fingerprints before closing or locking the door.

We only recommend installing brand new (directly from the store), brand name (Energizer or Duracell), alkaline batteries. Do not use lithium or rechargeable batteries.

## To reprogram the manager code:

1. Remove the threaded brass reset button cover.
2. Press and release the red reset button.
3. Enter a new manager code, between 3 and 12 digits long.
4. Press and release the red reset button to save the code.
5. Test the new code to confirm.

## To reprogram the user codes:

1. Remove the threaded brass reset button cover.
2. Select the code you'd like to reprogram. Press 1 for code number one or 2 for code number two, then immediately press the red reset button.
3. Enter a new user code, between 3 and 12 digits long.
4. Press and release the red reset button to save the code.
5. Test the new code to confirm.
6. Follow steps 2-5 to reprogram the other user code.

## Factory reset:

To revert to the default settings, hold the red reset button for 5 seconds, until you hear a long beep.

## To program fingerprints:

1. Remove the threaded brass reset button cover.
2. Press the number 3 keypad button, then immediately press and release the red reset button.
3. Press one fingerprint against the scanner until you hear a small beep.
4. Reposition and press the same fingerprint against the scanner. Repeat this action until you hear a long beep and the green LED flashes.

**NOTE:** If the yellow LED flashes three times, then the fingerprint was not saved and you'll need to repeat the process.

## Turning the fingerprint scanner ON/OFF:

In the standby state, press the 4 button twice, then press and release the red reset button to disable or enable the fingerprint scanner.

## Turning the Keypad Sound ON/OFF:

In the standby state, hold down the 4 button to enable or disable sound.

## Turning the Keypad Backlight ON/OFF:

In the standby state, hold down the 3 button to enable or disable the keypad's backlight.

## Lock Out Mode:

If you enter incorrect codes or unregistered fingerprints five times in a row, then the keypad will go into lock out mode for 60 seconds. During lock out mode, the keypad will beep every second. You will need to wait until the keypad stops beeping before you can try again.

## USB-C Power Port:

If the battery is dead or weak, then you can power the keypad with a USB-C power cord and the power port on the bottom, right side of the keypad. **Use a USB-A to USB-C power cord. USB-C to USB-C power cords are not compatible.**

**Important Note:** The default codes will remain unless you program new codes into their slots. You can use the same code or different codes for the manager code, the user one code, and the user two code.