

Vertical Handgun



Drawer Safe

SKU: HGS-01-BML-VRT

Dimensions: 12.5" H x 2.75" W x 9" D
(15.5" deep with the drawer extended, or
18" deep with the drawer and battery
compartment extended)

Four AA Batteries Not Included

What's Included:

Vertical Handgun Drawer Safe
Override Keys (2)
Mounting Plate
Mounting Plate Hardware
(4 screws, 4 drywall anchors)
Cover Plate (with 2 mounting screws)

Do not throw away the packaging until you've located your override keys!
We recommend using brand new (from the store), brand name (Energizer or Duracell), alkaline batteries. Do not use lithium or rechargeable batteries.

Installing the Batteries:

1. The battery compartment is located on the lower back of the safe. Press on the plastic tab and pull outwards to open the compartment.
2. Pull the battery holder out of the compartment and install four alkaline AA batteries. Make sure to properly orient the + and - terminals.
3. The battery compartment can only be installed in one orientation. Align the small notch on the battery holder with the bottom of the battery compartment and slide the holder inside.
4. Close the compartment door.

Mounting Plate Installation for Wood Surfaces:

1. Locate your mounting plate location. You'll need 18" of overall space, with 3" behind the safe for the battery compartment and 6.5" in front of the safe for the drawer.
2. Hold the plate in place and use a powered screwdriver to install the four screws into the mounting plate holes.

Mounting Plate Installation for Drywall Surfaces:

Recommendation: We include drywall anchors with the mounting hardware, however we recommend mounting the plate to wood for a more secure mount.

1. Locate your mounting plate location. You'll need 18" of overall space, with 3" behind the safe for the battery compartment and 6.5" in front of the safe for the drawer.
2. Hold the plate in place, then use a pen to mark out the mounting hole locations.
3. Pre-drill over the marked holes with a 1/4" drill bit, then place the anchors and press them firmly into the holes.
4. Line up the mounting plate over the anchors, then use a screwdriver to mount the plate using the screws provided.



**Contact Us
Here**

Do you have questions or need help?

Email: Support@SecureItTactical.com

Phone: 1-800-651-8835

Hours of Operation: 8:00 AM - 4:30 PM Eastern,
Monday through Friday



**See Our Warranty and
Return Policies Here**

The keyhole is located on the top of the safe, under a small cover. The key can be inserted in either direction, and turns 90 degrees counter-clockwise to open the drawer.

DO NOT STORE YOUR KEYS INSIDE THE SAFE!

Installing the Safe To the Mounting Plate:

After installing the mounting plate to the wall, you can attach the safe to the mounting plate.

1. Open the drawer with the key and fully extend the drawer.
2. Line up the prongs on the mounting plate with the holes on the safe, push the safe flat against the plate, then slide the drawer down.
3. Closing the drawer locks the safe to the plate. The safe can be removed from the mounting plate by fully extending the drawer and pulling up and away.

Installing the Cover Plate:

After attaching the safe to the mounting plate, you can use the two included screws and a #1 Philips-head screwdriver to install the cover plate over the unused set of safe mounting holes.

Lock Programming Instructions:

Default Access Code: 1-2-3-4

Two Beeps: Correct code/fingerprint

Three Beeps: Incorrect code/fingerprint

Keypad Sound: On by default

Low Battery Warning: When opening the drawer, five beeps and the keypad flashes red light

We recommend using brand new (from the store), brand name (Energizer or Duracell), alkaline batteries. Do not use lithium or rechargeable batteries.

To Reprogram the Access Code:

1. Open the drawer.
2. Press and hold the reset button (located under the internal light, under a small cover) for two seconds until the keypad beeps two times and the keypad buttons flash blue light.
3. Enter your new code, between 3 and 6 digits long, then press and release the reset button.

Two beeps confirms the code was successfully programmed, but three beeps indicates a failure. In case of failure, repeat steps 2 and 3.

To Program Fingerprints:

1. Open the drawer.
2. Press and hold the reset button (located under the internal light, under a small cover) for two seconds until the keypad beeps two times and the keypad buttons flash blue light.
3. Press your fingerprint against the sensor four times, lifting and repositioning your finger between each press. You will hear a small beep for each successful scan.

After four successful scans you'll hear two small beeps and the fingerprint will be registered. If you hear three beeps, then the fingerprint was not registered and you'll need to repeat steps 2 and 3.

Turning the Keypad Sound ON/OFF:

In the standby state, hold down the 4 button to enable or disable sound.

Lock Out Mode:

If you enter 3 incorrect codes or 5 unregistered fingerprints in a row, then the keypad will go into lock out mode for 30 seconds and the keypad will beep consistently. You will need to wait until the keypad stops beeping before you can try again.

Low Battery Warning:

When opening the drawer the keypad will beep 5 times and the keypad buttons will flash red if the batteries are weak. Replace the batteries as soon as possible to ensure the safe functions properly.

Factory Reset:

To reset the safe to the default settings and delete registered fingerprints press and hold the reset button for 6 seconds until the keypad beeps twice, the keypad button lights flash 5 times, and the keypad beeps 1 more time.